

3DViewStation VR 使用教程

最佳实践



The software programs described in this document and the information contained in this document are confidential and proprietary products of KISTERS or its licensors. KISTERS waives copyright for licensed software users to print out parts of the documentation in hard copy for their own use only. This documentation may not be transferred, disclosed, or otherwise provided to third parties.

In duplicating any part of this document, the recipient agrees to make every reasonable effort to prevent the unauthorized use and distribution of the proprietary information.

No parts of this work may be reproduced in any form or by any means – graphic, electronic, or mechanical, including photocopying, recording, taping, or information storage and retrieval systems – without the written permission of the publisher.

KISTERS reserves the right to make changes in specifications and other information contained in this publication without prior notice.

KISTERS makes no warranty of any kind with regard to this material including, but not limited to, the implied warranties or merchantability and fitness for a particular purpose.

KISTERS shall not be liable for any incidental, indirect, special or consequential damages whatsoever (including but not limited to lost profits) arising out of or related to this documentation, the information contained in it or from the use of programs and source code that may accompany it, even if KISTERS has been advised of the possibility of such damages.

Any errors found in any KISTERS product should be reported to KISTERS where every effort will be made to quickly resolve the problem.

Products that are referred to in this document may be either trademarks and/or registered trademarks of the respective owners. The publisher and the author make no claim to these trademarks.

版权所有 2024 Kisters AG
网址 : viewer.kisters.de
电子邮件 : support-viewer@kisters.de
电话 : +49 (0) 2408 9385-360

作者 : Kisters AG
当前版次的印刷日期 : 2024/3/19
当前程序版本 : 2019.0



目录

章 I	序言	5
章 II	优化可用于在VR中查看的CAD模型	7
章 III	在VR中打开CAD模型	9
章 IV	更换VR菜单	11
章 V	创建和自定义菜单	13
章 VI	设置	23



章 I:

序言

1 序言

In the following chapter you will find specific information on using KISTERS 3DViewStation VR-Edition. For a general description of the various measurement and analysis tools and further background information, see the chapter 3D data analysis and editing functions of the desktop version.

For performance reasons, we recommend that you first convert your model to KISTERS 3DVS format and optimize it if necessary. To do this, open your model with 3DViewStation Desktop and use **SAVE AS** to convert it to KISTERS 3DVS format. Enclosed you will find some tips for optimizing the model.

章 II:

优化可用于在VR中查看的CAD模型

2 优化可用于在VR中查看的CAD模型

With the purchase of the KISTERS 3DViewStation VR-Edition you have also acquired a right of use for the 3DViewStation Desktop. This was already installed with the VR-Edition. For performance reasons it is recommended to edit native CAD models and convert them into our optimized KISTERS 3DVS format.

The list of supported formats can be found via the page navigation. Detailed usage hints for the tools can be found in the [3DViewStation Desktop Tutorial](#).

By reducing the amount of information contained or displayed, the import time can be reduced and the rendering performance increased.

- Delete all structures and geometries from the model that you do not need for VR viewing. This can be done by isolating the required geometries or hiding the unneeded geometries and then saving only visible geometries.
- If possible, subassemblies can also be saved in individual files.
- The **SEARCH** tool can be used to identify and remove auxiliary geometries such as points, lines, surfaces, coordinate systems etc.
- A low level of detail in the tessellation leads to more angular curves, but increases the rendering performance (frame rate).


章 III:

在VR中打开CAD模型

3 在VR中打开CAD模型

Models are opened via the desktop client of the VR-Edition (see figure).

- Start the 3DVSVR.exe.
- Open the menu **FILE** and the menu item **OPEN**.
- Navigate to your CAD model.
- Select it and then press the **OPEN** button.

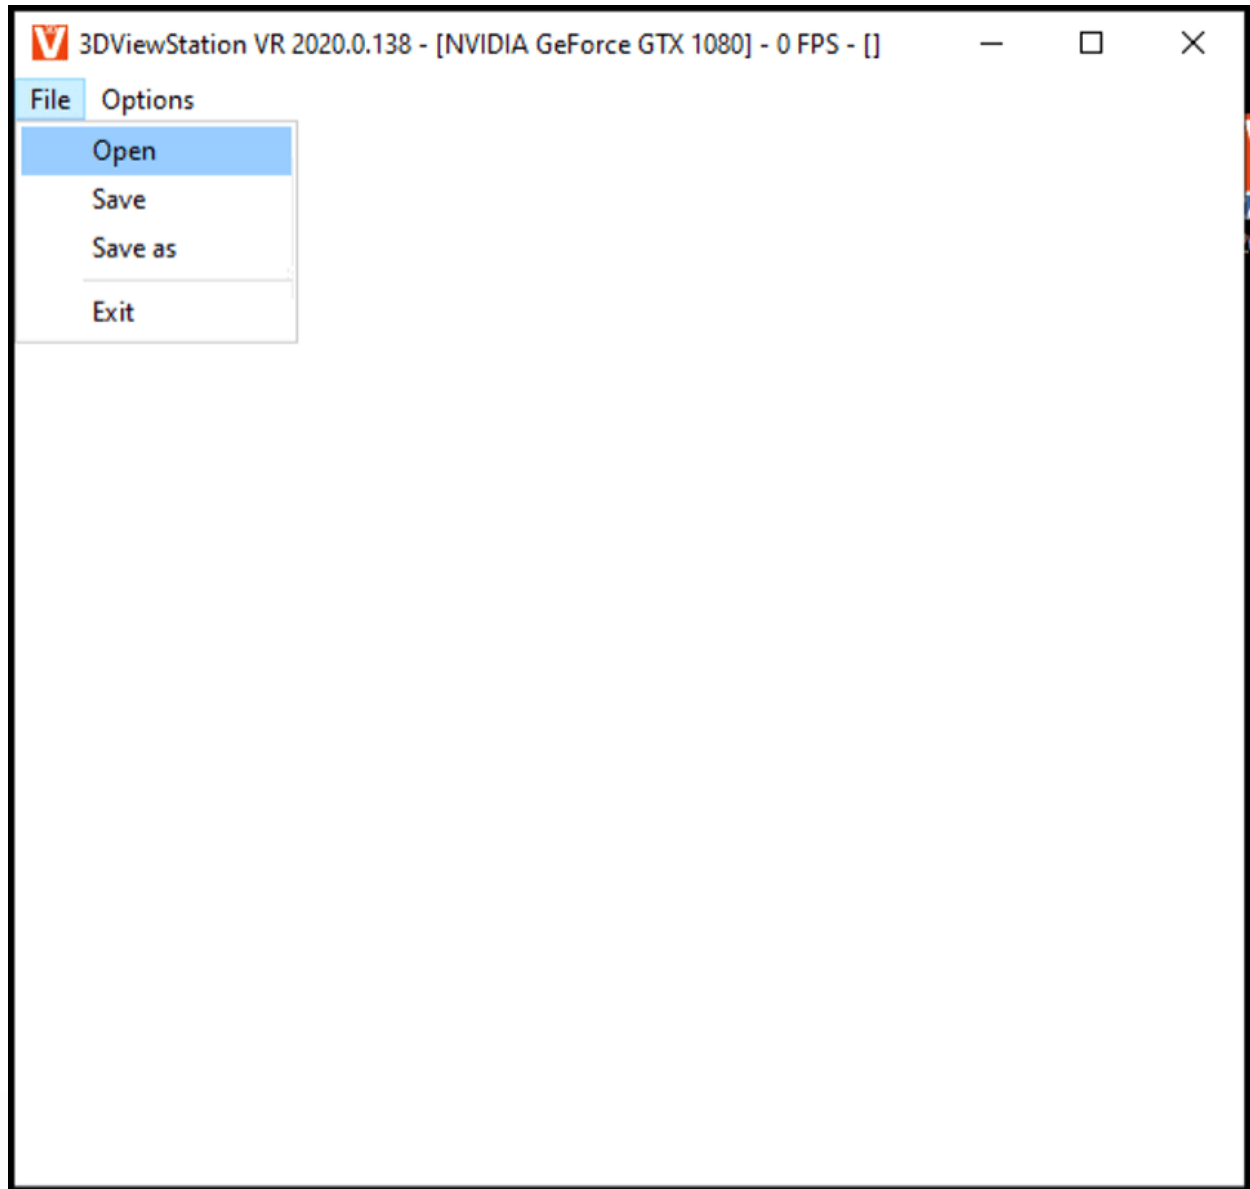



章 IV:

更换VR菜单

4 更换VR菜单

After installation, the complete menu with access to the full range of functions is shown in the VR. You can switch to the reduced mini-UI menu using the desktop application. You can also create your own menu configurations.

- Start the 3DVSVR.exe.
- Open the **OPTIONS** menu and the menu item **LOAD MENU CONFIGURATION**.
- Navigate to `Installation Directory\VR\Menus`.
- Select the Mini-UI and finally press the **[OPEN]** button.
- In the VR a clearly arranged reduced menu is now displayed. Repeat the process to switch back to the full default menu.

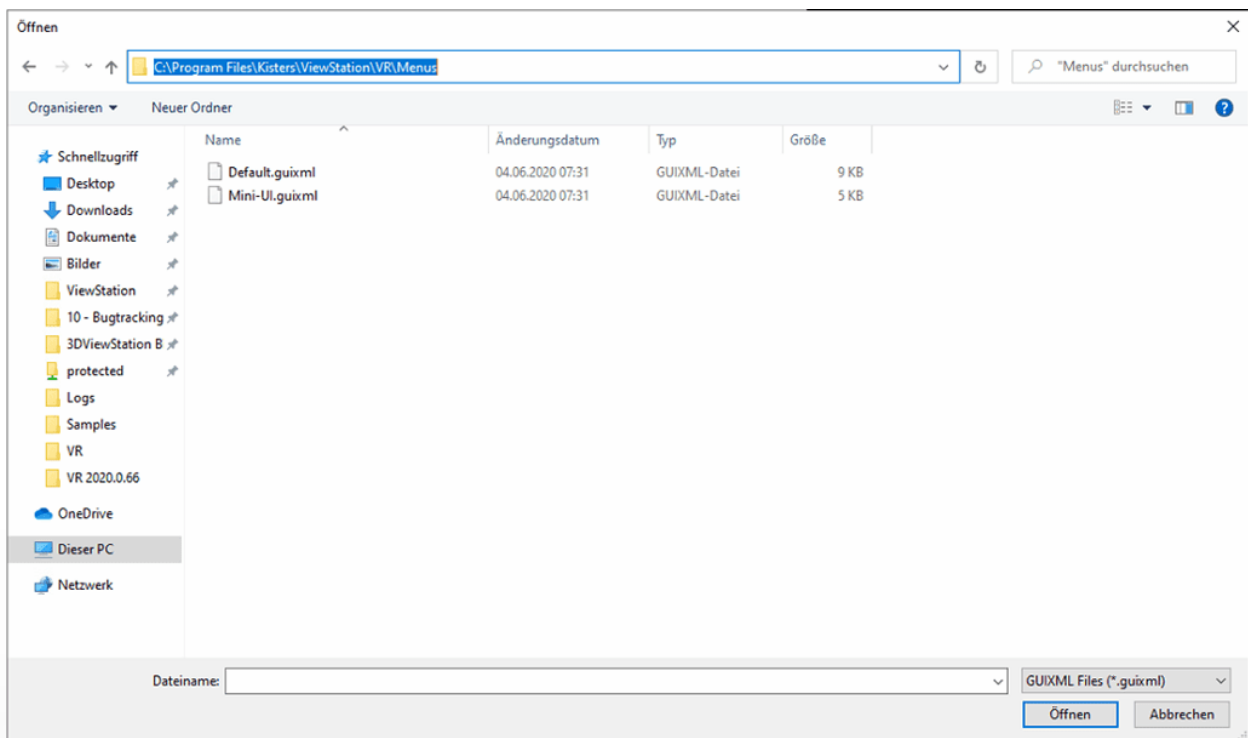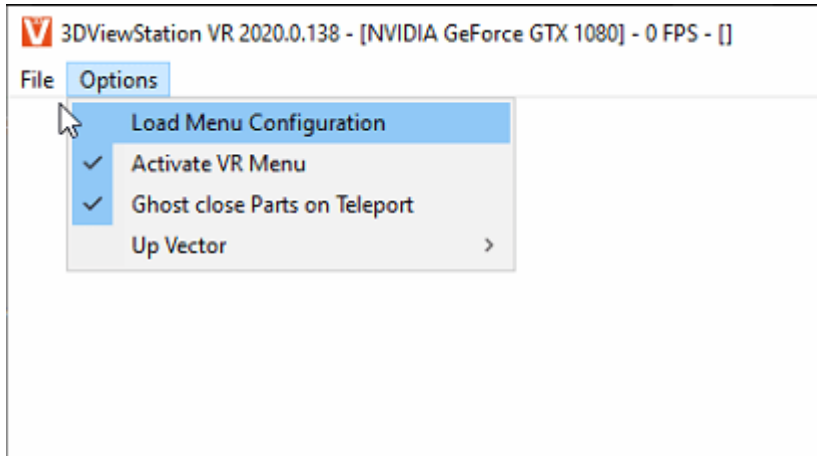

章 V:

创建和自定义菜单

5 创建和自定义菜单

With a text editor like Notepad++ you can create your own additional menus or adapt existing menus.

- Copy the file Default.guixml (complete menu) from the folder Installation Directory\VR\Menus for example to your desktop and rename it.
- Open the renamed file with an editor.
- Edit the xml structure. The elements are explained in the following table.
- Copy your customized menu into the VR/Menu folder.

```








1  <?xml version="1.0" encoding="utf-8" standalone="yes"?>
2  <Menu Distance="500.0" ButtonSize="100.0" Spacing="5.0" Tilttable="false">
3    <Tab Name="Start" Icon="Start.png">
4      <Row>
5        <Button Category="2" Name="Select" ID="1" Icon="1_selektieren.svg.png" />
6      ...
7    </Row>
8  ...
9  </Tab>
10 ...
11 </Menu>













```














Tag	Attribute	Description
Menu		Creates the VR menu (max. 1 allowed).
	Distance	Distance from controller to menu.
	ButtonSize	Size of the menu buttons.
	Spacing	Distance between the menu buttons.
	Tilttable	The menu is tilted according to the controller position.
Tab		Creates a new tab.
	Name	Name of the tab.
	Icon	Icon of the tab. This must be located in the Installation Directory\Resources\Icons or a subdirectory.
Row		Creates a line within the tab. The lines are displayed in the order in which they were defined. The width of the menu is automatically adjusted.
















Tag	Attribute	Description
Button		Creates another menu button.
	Name	Button name, appears when the selection beam points to a button.
	Icon	Icon of the button. This must be located in the Installation Directory\Resources\Icons or a subdirectory.
	Category & ID	<p>From the combination CATEGORY and ID the button is connected to a tool. Search for the desired tool in the following table and take the values for CATEGORY and ID.</p> <p>Example: The MEASUREMENT - POINT COORDINATE tool has the values Category (4), ID (1).</p>














VR Menu












Symbol	Description	Category	ID
<p>Start</p> 	Tab Start		
	Parts can be selected with the red beam (controller key 3)	2	1
	Hide parts	2	2
	Delete parts	2	3
	Activates Ghost function	2	4
	Selects parts with the same node color	2	6
	Selects all instances of a part	2	7













Symbol	Description	Category	ID
	Select all	1	1
	Isolate selected parts (all other parts are hidden)	1	3
	Hide selected parts	1	5
	Delete selected parts	1	6
	Ghost selected parts	1	7
	Hide all markups	1	12
	Hide all PMIs	1	13
	Invert the selection of the selected parts	1	2
	Reverse the visibility of parts	1	14
	Show all parts	1	10
	Sets all ghosted parts to visible	1	11
	Create a screenshot in PDF format	6	64
	Create a screenshot in BMP format	6	8






Symbol	Description	Category	ID
	Create a screenshot in JPG format	6	32
	Create a screenshot in PNG format	6	16
View 	Tab View		
	Activating home view	1	15
	Activating previous view	1	16
	Activating next view	1	17
	Show/Hide solids	1	18
	Show/Hide wires	1	19
	Show/Hide shadows	1	20
	Show/Hide animations	1	21
Measure 	Tab Measurement		
	Create markup with point coordinates	4	1
	Create markup with edge length	4	2

Symbol	Description	Category	ID
	Create markup with circle radius	4	4
	Create markup with circle diameter	4	5
	Create markup with circumference	4	6
	Create markup with circle center	4	7
	Create markup with point-point distance	4	8
	Create markup with point-edge distance	4	9
	Create markup with point-circle axis distance	4	10
	Create markup with point-solid distance	4	11
	Create markup with edge-edge distance	4	12
	Create markup with edge-surface distance	4	13
	Create markup with edge-solid distance	4	14
	Create markup with circle axis-circle axis distance	4	16
	Create markup with circle axis-edge distance	4	17
	Create markup with surface-surface distance	4	18
	Create markup with surface axis-circle center distance	4	19

Symbol	Description	Category	ID
	Create markup with surface-solid distance	4	20
	Create markup with solid-solid distance	4	21
	Create markup with cylinder center-surface distance	4	22
	Create markup with circle axis-circle axis angle	4	23
	Create markup with circle axis-edge angle	4	24
	Create markup with edge-edge angle	4	25
	Create markup with plane-plane angle	4	26
	Create markup with an angle between edges from three points	4	28
	Create markup with ray-based thickness in one measurement point	4	29
	Create markup with rolling ball thickness in one measurement point	4	30
	Create markup with the (world) axis parallel bounding box of one or more parts	4	31
	Create markup with a minimum bounding box aligned with the part	4	32
	Create markup with the surface area of a selected area	4	34

Symbol	Description	Category	ID
	Create markup with the area of a selected circle	4	35
	Create markup with drill hole information of a selected circle	4	36
Analyze 	Tab Analysis		
	Cut the model along a plane to show the interior and take measurements	1	23
	Quick graphical comparison between two models	1	24
	Calculation of the neutral axis running through the center of a tube	1	29
	Calculation of drill holes that are present in the part. (Only for models with construction edges)	1	30
	Shows angles at which a casting mould can be placed around the model	1	31
	Generates a new geometry that displays the wall thicknesses of selected models using a color scale	1	32
Transform 	Tab Transform		
	Free moving in space	5	1

Symbol	Description	Category	ID
	Moving along the coordinate axes	5	2
	Rotation along the axes of the model	5	3
	Mirroring on a specific plane	1	34
	Resets transformations made after loading	1	28
	Transformation using any two points	5	10
	Transformation using two circle center points	5	12
	Rotation based on two normals	5	20
	Alignment over two coordinate systems	5	30
	Alignment over two circle axis	5	31
	Alignment over two planes	5	32
	Scale up	1	35
	Scale down	1	36

Symbol	Description	Category	ID
Tools 	Tab Tools		
	Draw circle markup	3	2
	Freehand drawing	3	4
	Deactivate all active functions and reset the cursor mode to "Select"	1	33
	Undo last action	1	22

章 VI:

设置

6 设置

The setting management is based on three steps:

1. If no settings have been stored, the 3DViewStation VR-Edition starts with factory settings.
2. If the 3DViewStation Desktop has already been used, it creates the `Current.xml` in the user directory (also with the same factory settings). As soon as a `Current.xml` is available, it will be interpreted by the VR-Edition. Thus, default settings can be made in 3DViewStation Desktop, which also apply to the VR-Edition.
3. If you want independent settings for Desktop and VR-Edition, you can store and edit a `CurrentVR.xml` (VR-Edition) next to the `Current.xml` (Desktop). This can be a copy of the `Current.xml` (desktop) or a profile (desktop). See [the corresponding chapter](#) in the tutorial of the desktop application.